DYNA-AIR

OPERATING INSTRUCTIONS

Seat Height

To raise the seat:
Take your weight off the seat, pull the lever upwards, let go of the lever when the seat is at the desired height.

To lower the seat:
put your weight on the seat, pull the lever upwards, let go of the lever when the seat is at the desired height.

Seat Depth

For individual seat-depth adjustment:
While holding the backrest with left hand press and hold button with right hand and move the seat to desired position using yout torso. Release the button to lock the position in place.




Adjustable Arms (Height)

Height-adjustable (4”)
Press and hold button to desired height, release button to lock.

Backrest Angle Lock

To unlock:
Take weight off backrest and turn the lever upwards to unlock position.

To adjust and lock in multiple positions:
Lean backwards on backrest to desired position and turn the lever downward to lock.

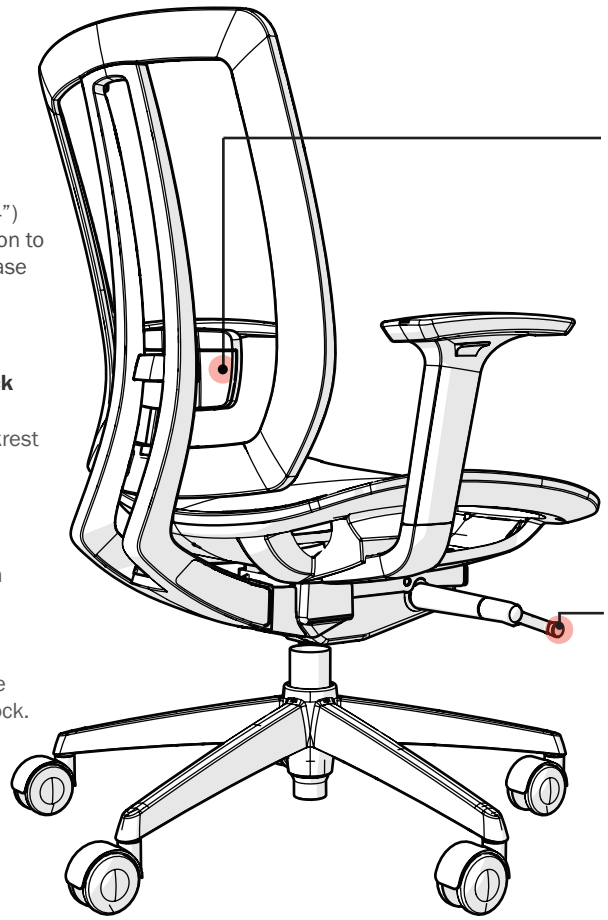

Lumbar Support (Height)

Height adjustment:
Adjust the height of the lumbar support to roughly the level of your belt. Adjust the height by pulling the lumbar support upwards or pushing it downwards using both hands.

Tension Adjustment

To increase the backrest tension:
Rotate forward.

To decrease the backrest tension:
Rotate backward.

*Optional features may not be included
All specifications subject to change without notice.
Any servicing of your Dauphin Chair must be performed by an authorized Dauphin Dealer.

USA: 100 Fulton Street Boonton, NJ 07005 TEL: 800.631.1186 FAX: 800.220.3844 EMAIL: info@dauphin.com WEB: dauphin.com DA.OI.03.16

VALO®
A division of Dauphin North America